

FLUKE®

1742/1746/1748

3 Phase Power Quality Logger

Remote Monitoring Session

PN 5041162

February 2020

©2020 Fluke Corporation. All rights reserved. Specifications are subject to change without notice. All product names are trademarks of their respective companies.

***FLUKE CONNECT® APPLICATION AND SERVICES
END USER LICENSE AGREEMENT (EULA) AND SERVICES
AGREEMENT***

For complete details, go to <https://connect.fluke.com/eula>.

Visit Fluke's website at www.fluke.com.

To register your product, visit <http://register.fluke.com>.

To view, print, or download the latest manual supplement, visit
<http://us.fluke.com/usen/support/manuals>.

Fluke Corporation
P.O. Box 9090
Everett, WA 98206-9090
U.S.A.

Fluke Europe B.V.
P.O. Box 1186
5602 BD Eindhoven
The Netherlands

ООО «Флюк СИАЙЭС»
125167, г. Москва,
Ленинградский проспект дом 37,
корпус 9, подъезд 4, 1 этаж

Remote Monitoring Session

With the Fluke Connect app, you can review remote monitoring sessions in the app and export the session data to Energy Analyze Plus software.

To export session data:

1. Go to **View Active Monitoring Sessions**.
2. Tap **Export session data**.
3. Configure the start/end dates and time.
4. Enter the email address of the recipients and tap **Export session data**.
A link to download the measurement file is sent by email.
5. On a PC, download the measurement file (extension *.fel).
6. Double-click on the downloaded filename in Windows File Explorer to open the file in Energy Analyze Plus software.
7. Energy Analyze Plus prompts you to save the file as a project (compound file with extension *.fca).

You can review monitoring sessions, export the data to Fluke Energy Analyze, and manage assets and associated alarms with a web browser.

To review monitoring sessions:

1. In a web browser (for example, on your PC) go to <https://connect.fluke.com>.
2. Sign in with your Fluke Connect credentials.
3. Go to **Measurements > Active Sessions** or **Saved Sessions** to analyze and export the measurement data.
4. Go to **Assets** to update the asset status, modify the descriptions, add images, and configure or adjust alarms.