

**FLUKE®**

**1742/1746/1748**

3 Phase Power Quality Logger

Activate Subscription

PN 5041162

February 2020

©2020 Fluke Corporation. All rights reserved. Specifications are subject to change without notice. All product names are trademarks of their respective companies.

***FLUKE CONNECT® APPLICATION AND SERVICES  
END USER LICENSE AGREEMENT (EULA) AND SERVICES  
AGREEMENT***

For complete details, go to <https://connect.fluke.com/eula>.

Visit Fluke's website at [www.fluke.com](http://www.fluke.com).

To register your product, visit <http://register.fluke.com>.

To view, print, or download the latest manual supplement, visit  
<http://us.fluke.com/usen/support/manuals>.

Fluke Corporation  
P.O. Box 9090  
Everett, WA 98206-9090  
U.S.A.


Fluke Europe B.V.  
P.O. Box 1186  
5602 BD Eindhoven  
The Netherlands

ООО «Флюк СИАЙЭС»  
125167, г. Москва,  
Ленинградский проспект дом 37,  
корпус 9, подъезд 4, 1 этаж

## Activate Subscription

The optional subscription for the Remote Monitoring feature requires that you associate the serial number and activate the Logger to a Fluke Connect account. This setup is required only once unless the device administrator changes.

1. Go to <https://connect.fluke.com>.
2. Select **Activate 174x FC**.

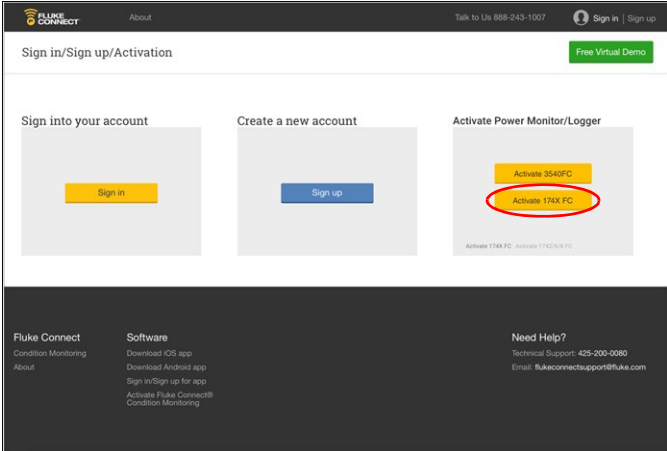

The screenshot shows the Fluke Connect website interface. At the top, there is a navigation bar with the Fluke Connect logo, an 'About' link, a phone number 'Talk to Us 888-243-1007', and 'Sign in | Sign up' links. Below the navigation bar is a header section with the text 'Sign in/Sign up/Activation' and a green button labeled 'Free Virtual Demo'. The main content area is divided into three columns: 'Sign into your account' with a yellow 'Sign in' button, 'Create a new account' with a blue 'Sign up' button, and 'Activate Power Monitor/Logger'. The 'Activate Power Monitor/Logger' section contains two yellow buttons: 'Activate 3540FC' and 'Activate 174x FC', with the latter button circled in red. At the bottom of the page, there is a dark footer section with three columns: 'Fluke Connect' (with links for Condition Monitoring, About, and Software), 'Software' (with links for Download iOS app, Download Android app, Sign in/Sign up for app, and Activate Fluke Connect® Condition Monitoring), and 'Need Help?' (with Technical Support: 425-200-0080 and Email: flukeconnectsupport@fluke.com).

### Note

*Activation of the 174x is not required when you use the Fluke Connect App to configure and start a local logging session only.*

## 1742/1746/1748

### Instructions

---

3. Sign-up to create a new account, or if you already have an account, sign-in. The Fluke Connect App also uses this account information.
4. Complete the form and select **Activate**.

Activate Fluke Connect Condition Monitoring product

Product Serial Number \*

Company Details

Company Name \*

Company Address \*

Phone Number \*

CANCEL ACTIVATE

