

**FLUKE®**

# **1742/1746/1748**

3 Phase Power Quality Logger

## Instrument Settings

PN 5041162

February 2020

©2020 Fluke Corporation. All rights reserved. Specifications are subject to change without notice. All product names are trademarks of their respective companies.

***FLUKE CONNECT® APPLICATION AND SERVICES  
END USER LICENSE AGREEMENT (EULA) AND SERVICES  
AGREEMENT***

For complete details, go to <https://connect.fluke.com/eula>.

Visit Fluke's website at [www.fluke.com](http://www.fluke.com).

To register your product, visit <http://register.fluke.com>.

To view, print, or download the latest manual supplement, visit  
<http://us.fluke.com/usen/support/manuals>.

Fluke Corporation  
P.O. Box 9090  
Everett, WA 98206-9090  
U.S.A.

Fluke Europe B.V.  
P.O. Box 1186  
5602 BD Eindhoven  
The Netherlands


ООО «Флюк СИАЙЭС»  
125167, г. Москва,  
Ленинградский проспект дом 37,  
корпус 9, подъезд 4, 1 этаж

## ***Instrument Settings***


To check the setup:

1. Go to **Session Setup**.

2. Tap  .

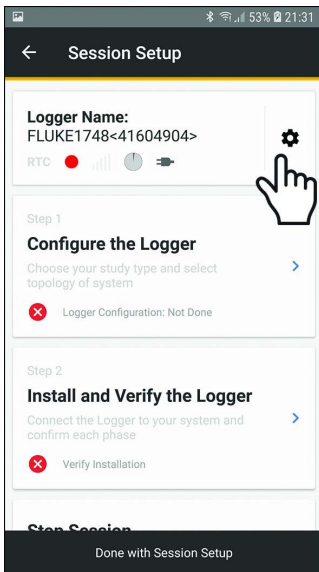

The current settings show on the display. Scroll down for more settings.

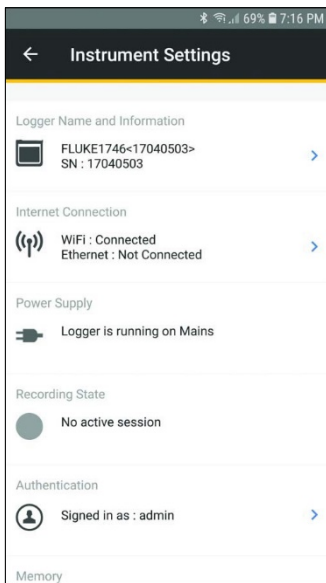

Use **Instrument Settings** to:

- Edit the Logger Name
- Select a WiFi access point to connect
- Select Ethernet settings
- View power supply status
- View recording status
- Change user name and password to log-in to the Logger
- View Memory status
- View instrument date and time and select time synchronization source
- View details of attached current sensors
- View firmware version
- View installed licenses
- Download Service Log Data to Phone
- Reset to factory defaults