

In app flow for initial sensor set up

Signal strength indicator—available on mobile app only. Signal strength will be shown during the setup of the sensors. Users are now able to determine if Fluke 3502 FC Gateway and Fluke 3561 FC Vibration Sensors are being installed at optimal distance.

រមៀ 9:41 AM 💷 ។	atl 9:41 AM 📼 🕈	ull 9:41 AM 📟 🕈
< Configure Sensors	2 < Configure Sensors 3	< Configure Sensors
Step 2 of 3 Configure and Install the Sensors	Step 2 of 3 Configure and Install the Sensors	Step 2 of 3 Configure and Install the Sensors
Specify the equipment that each sensor is nonitoring by assigning an asset or test point to he Sensor.	Specify the equipment that each sensor is monitoring by assigning an asset or test point to the Sensor.	Speci monit the S present between the
Collected at 03/28/19 15:23:44	0.000 g Collected at 03/28/19 15:27:02	 sensor and the 3502FC gateway. However, interruptions can occur due to changes in the environment around the Gateway and the Sensor.
Sensor Status Initializing Remove Sensor	III Connection Strength Poor Sensor Status Active Ready for installation	Consider repositioning the Gateway or adding another Gateway to establish a better connection.
sets & Alarms 🗸 🗸	Warning: Poor Connection Remove Sensor	OK
ne signal strength is good , ve forward with set up	If signal strength is poor , click on	Assets & Alarms
	the tile to find out more and get information on actions to take	Example of pop-up
Section Sensors	wl 9:41 AM → + C Configure Sensors	الله 9:41 AM الله الله الله الله الله الله الله الل
o 2 of 3 igure and Install the Sensors	5 Configure Sensors Step 2 of 3 Configure and Install the Sensors	Step 2 of 3 Configure and Install the Sensors
Specify the equipment that each sensor is nonitoring by assigning an asset or test point to	Speci Unavailable	Speci monit Warning to



New: remove sensor during setup, if needed



When connection strength shows as **unavailable**, click on the tile to understand what "unavailable" means and action as needed



If you choose to install a sensor with poor or **unavailable** signal strength, select Install Sensors anyway when prompted



In app flow for initial sensor set up

Adding additional Fluke 3502 FC Gateway—available in mobile app only. Users are now able to add multiple gateways to boost signal strength.

Il Verizon OB:25 Il 14% I + Session Setup Hold your mobile device in close proximity to the Gateway.	III Verizon 08:25 ● 13% □ + Sensor Installation Details	Ill Verizon 08:25 ⊕ 1 G Fix Connection
ADD SENSORS	Fluke 3561 (3AE7C) Epoxy Application	Connection Strength Poor
SENSORS & ALARMS GATEWAY	Connection Strength Poor -83dBm	Unable to get an Excellent connection? repositioning your 3502FC Gateway.
III Connection Strength Poor	Sensor Status Active	Adding a 3502FC Gateway will improve connection strength and boost range for your Vibration Conditi Monitoring Setup
Sensor Status Active	Assigned Asset / Test Point	Add another 3502FC Gateway
Assigned Asset / Test Point Demo VFD Motor > VFD Motor > Motor Drive End - TEST	Demo VFD Motor > VFD Motor > Motor Drive End - TEST	Remove this sensor
Alarm Fluke Overall Vibration Alarms Active Custom Vibration Alarms Active	You have a poor connection !	Click Add another 3502 FC
Installation Details		Gateway to start gateway s

Click Installation Details

Click Fix Connection



In app flow for active sessions

Adding additional Fluke 3502 FC Gateway-available in mobile app only. Users are now able to add multiple gateways to boost signal strength to an existing sensor session.

< Fluke 3502 Gateway (E39D1) ··· 2 MONITORING IN PROGRESS	MONITORING IN PROGRESS	K Session Setup Hold your mobile device in close proximity to the G
Fluke 3502 Gateway (E39D1)	Fluke 3502 Gateway (E39D1)	ADD SI
Sensors 1 Vibration	Sensors 1 Vibration	SENSORS & ALARMS GATEWAY
Start Time 12/13/2018, 14:41:58 Demo	Start Time 12/13/2018, 14:41:58 Demo	III Connection Strength Poor
Assets (1) Demo VFD Motor VFD Motor > Motor Drive End - TEST	Assets (1) Demo VFD Motor VFD Motor > Motor Drive End - TEST	Sensor Status Active
Demo VFD Motor	View / Edit Session Setup	Assigned Asset / Test Point Demo VFD Motor > VFD Motor > Motor Drive - TEST
VFD Motor Motor Drive End - TEST	View Session Activity	Alarm Fluke Overall Vibration Alarms Active Custom Vibration Alarms Active
1H 8H 1W 3W ALL	End Session	Installation Details

Click on the three dots to open pop-up

08:25

13%



Adding a 3502FC Gateway will improve connection strength and boost range for your Vibration Condition Monitoring Setup

Add another 3502FC Gateway



Click Fix Connection



Click Add another 3502 FC Gateway to start gateway set up.

Accelix. Connected Reliability.

PO Box 9090, Everett, WA 98206 U.S.A. For more information call: In the U.S.A. 856-810-2700 In Europe +353 507 9741 In UK +44 117 205 0408 Email: support@accelix.com Web access: http://www.accelix.com

©2019 Fluke Corporation. 4/2019 6012227a-en

Modification of this document is not permitted without written permission from Fluke Corporation.